



1. PROGRAMMING REGULAR PHONE NUMBERS

The dialer can call up to 4 regular phone numbers per zone. To program the numbers to be called when zone 1 (Z1) is in alarm:

- Press **[PROG] [1] [#]** - this selects location 1.
- After the dial LED flashes twice, enter phone number to dial.
- Finish by pressing **[#]**.

Example:

[PROG] [1] [#] [5] [5] [5] [1] [2] [1] [2] [#] - this would dial phone number 555-1212 and deliver the message programmed for zone 1.

Program the remaining phone numbers (2, 3 and 4) as above. For example:

- Press **[PROG] [2] [#]** - this selects location 2.
- After the dial LED flashes twice, enter phone number to dial.
- Finish by pressing **[#]**.

Program numbers for **zone 2 (Z2)** in the same manner, except that the location numbers will be 5, 6, 7, & 8. Start with pressing **[PROG] [5] [#]** - this selects location 5.

2. PROGRAMMING NUMERIC PAGERS

Pagers require two phone number locations. Therefore, each DL-125C / DL-125CA zone can call a maximum of two pagers. Proceed as follows to program pagers into zone 1:

- Press **[PROG] [1] [#]** - this selects location 1.
- After the dial LED flashes twice, enter the phone number of the numeric pager.
- Press **[★] [4]** - this links the current location with the next for pager function.
- Press **[#]**.
- Press **[PROG] [2] [#]** - this selects location 2.
- After the dial led flashes twice, press **[★] [4]** - this links this location to the previous location for pager function.

- Press **[1] [0]** to provide a 10-second delay allowing the paging company to pick up (you can enter any two digit value, but 10 seconds works in most cases).
- Enter the number you wish to appear on the pager's display and finish by pressing **[#]**.

Example:

[PROG] [1] [#] [5] [5] [5] [2] [5] [2] [5] [★] [4] [#] and then:
[PROG] [2] [#] [★] [4] [1] [0] [9] [9] [9] [9] [#] - this would deliver the message "9999" to a pager at phone No. 555-2525.

If you wish to program another pager in zone 1, follow these same steps, but use locations 3 and 4. To program pagers into zone 2, use locations 5 & 6 and/or locations 7 & 8.

3. RECORDING VOICE MESSAGES

The DL-125C / DL-125CA contains three locations for voice messages. The total recording time cannot exceed 19 seconds.

Location / common message (up to 14.5 sec.) - name and address that is common to AL-1 and AL-2 messages.

Message AL-1 (up to 2.5 sec.) is the alarm type message for zone 1 (burglar alarm activation, for example).

Message AL-2 (up to 2 sec.) is the alarm type message for zone 2 (low temperature detection, for example).

You must record at least the common message and one of the alarm messages (AL-1 or AL-2). You cannot record only a common message. Recording should be done in the following order:

To record AL-1 & AL-2 (location message):

- Press **[#]**
- Press and hold both **[AL-1]** and **[AL-2]** buttons at the same time while reading the message aloud - red LED will be on.

- Release **[AL-1]** and **[AL-2]** and press **[#]** - red LED will turn off.

To record AL-1 message:

- Press **[#]**
- Press and hold **[AL-1]** while reading the message aloud - red LED will be on.
- Release **[AL-1]** and press **[#]** - red LED will turn off.

To record AL-2 message:

- Press **[#]**
- Press and hold **[AL-2]** while reading the message aloud - red LED will be on.
- Release **[AL-2]** and press **[#]** - red LED will turn off.

For more advanced applications, refer to the DL-125C installation instructions, or contact the technical support.

INTERNET: www.visonic.com
EMAIL: info@visonic.com

DL-125C, DL-125CA DE5803Q (Rev. 2, 07/19)

© 2019 Johnson Control Johnson Controls. All rights reserved. JOHNSON CONTROLS, TYCO and VISONIC are trademarks and/or registered trademarks. Unauthorized use is strictly prohibited.

